

Samsung SDP-860 Document Camera




Basic instructions


by: Tina Freeman

1. Turn On Computer
2. Press the Power button on the document camera base

To turn on the power of the digital presenter, press the Power button on the digital presenter's control board or remote controller.

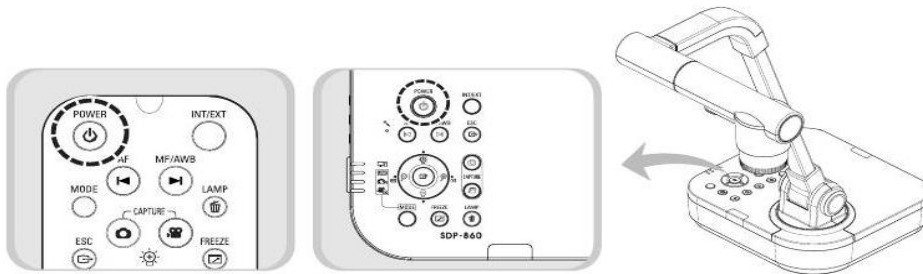



3. Wait for Projector to warm up (60 seconds).
4. If doc camera isn't displaying on the board, go to the Crestron Controls located on the wall.

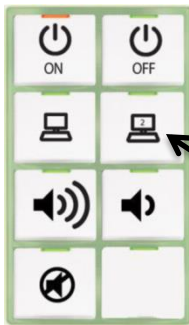







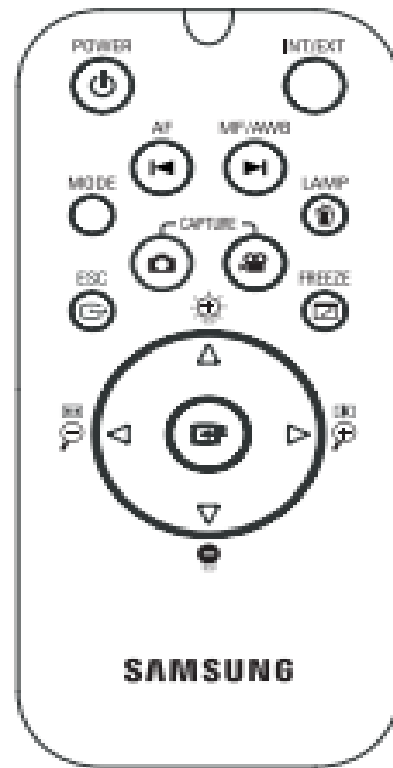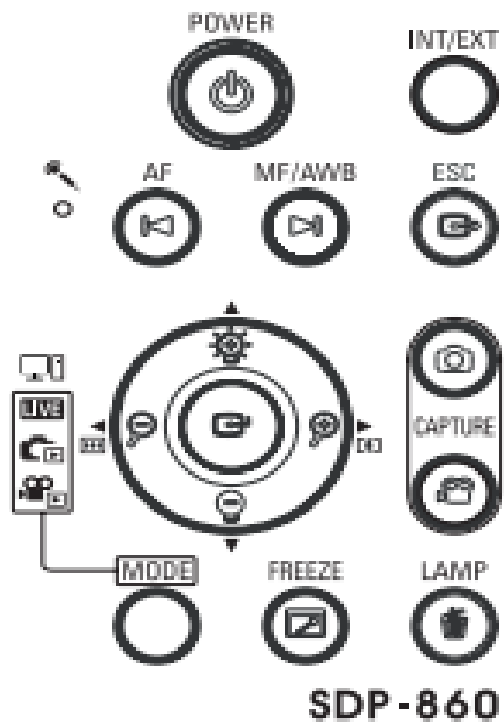




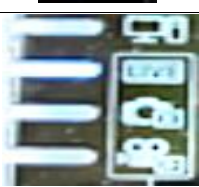
Choose the computer screen with the number 2, click slowly to locate doc camera. If it still isn't showing select computer screen on the left.

5. Position Camera as desired, use zoom button on camera base or remote if available.

What about transparencies? You can display them using the camera without placing a light underneath. You may need to adjust the head a little to reduce glare.



No.	Button	Function
1		Turn On/ Off Power
2		Select Internal/External Video
3		Built-in Microphone
4		Auto Focus
5		Auto Color Adjustment

6		Cancel Command
7		Brighten/Darken Screen
8		Enlarge / Minimize Screen
9		Open Menu
10		Capture Screen as Picture
11		Pause Screen or While playing video switch to Full Screen
12		Turn On/Off Light
13	 Status LED	In Live Mode, Blue LED In still Image Mode - Blue LED In Video Mode - Blue LED